

Reset procedure for your Pegase device

Reset procedure for the device is to be done outside and while the engine is running.



01

While leaving the tracker connected to the motorbike battery, **unscrew the two screws on the back of the device** to find this :



02

Shaking or tapping it should cause it light up at the input level like this :



03

Then, after a while, **the device should communicate correctly** by showing this :



04

If steps 2 and 3 don't happen after shaking the device, then it will need to be reset **by firmly pressing the button found in the red box for 2 seconds** :

After this reset, wait several minutes and normally steps 2 and 3 will take care of themselves.

Measurement of the incoming voltage on the electronic panel of the Pegase device



01

In order to check that the device is powered correctly, **check the voltage** directly on the electronic panel **using the pins located in the red box** (top pin corresponding to the positive) :